



Antenne

Schaltschema für SABA-Reporter WK

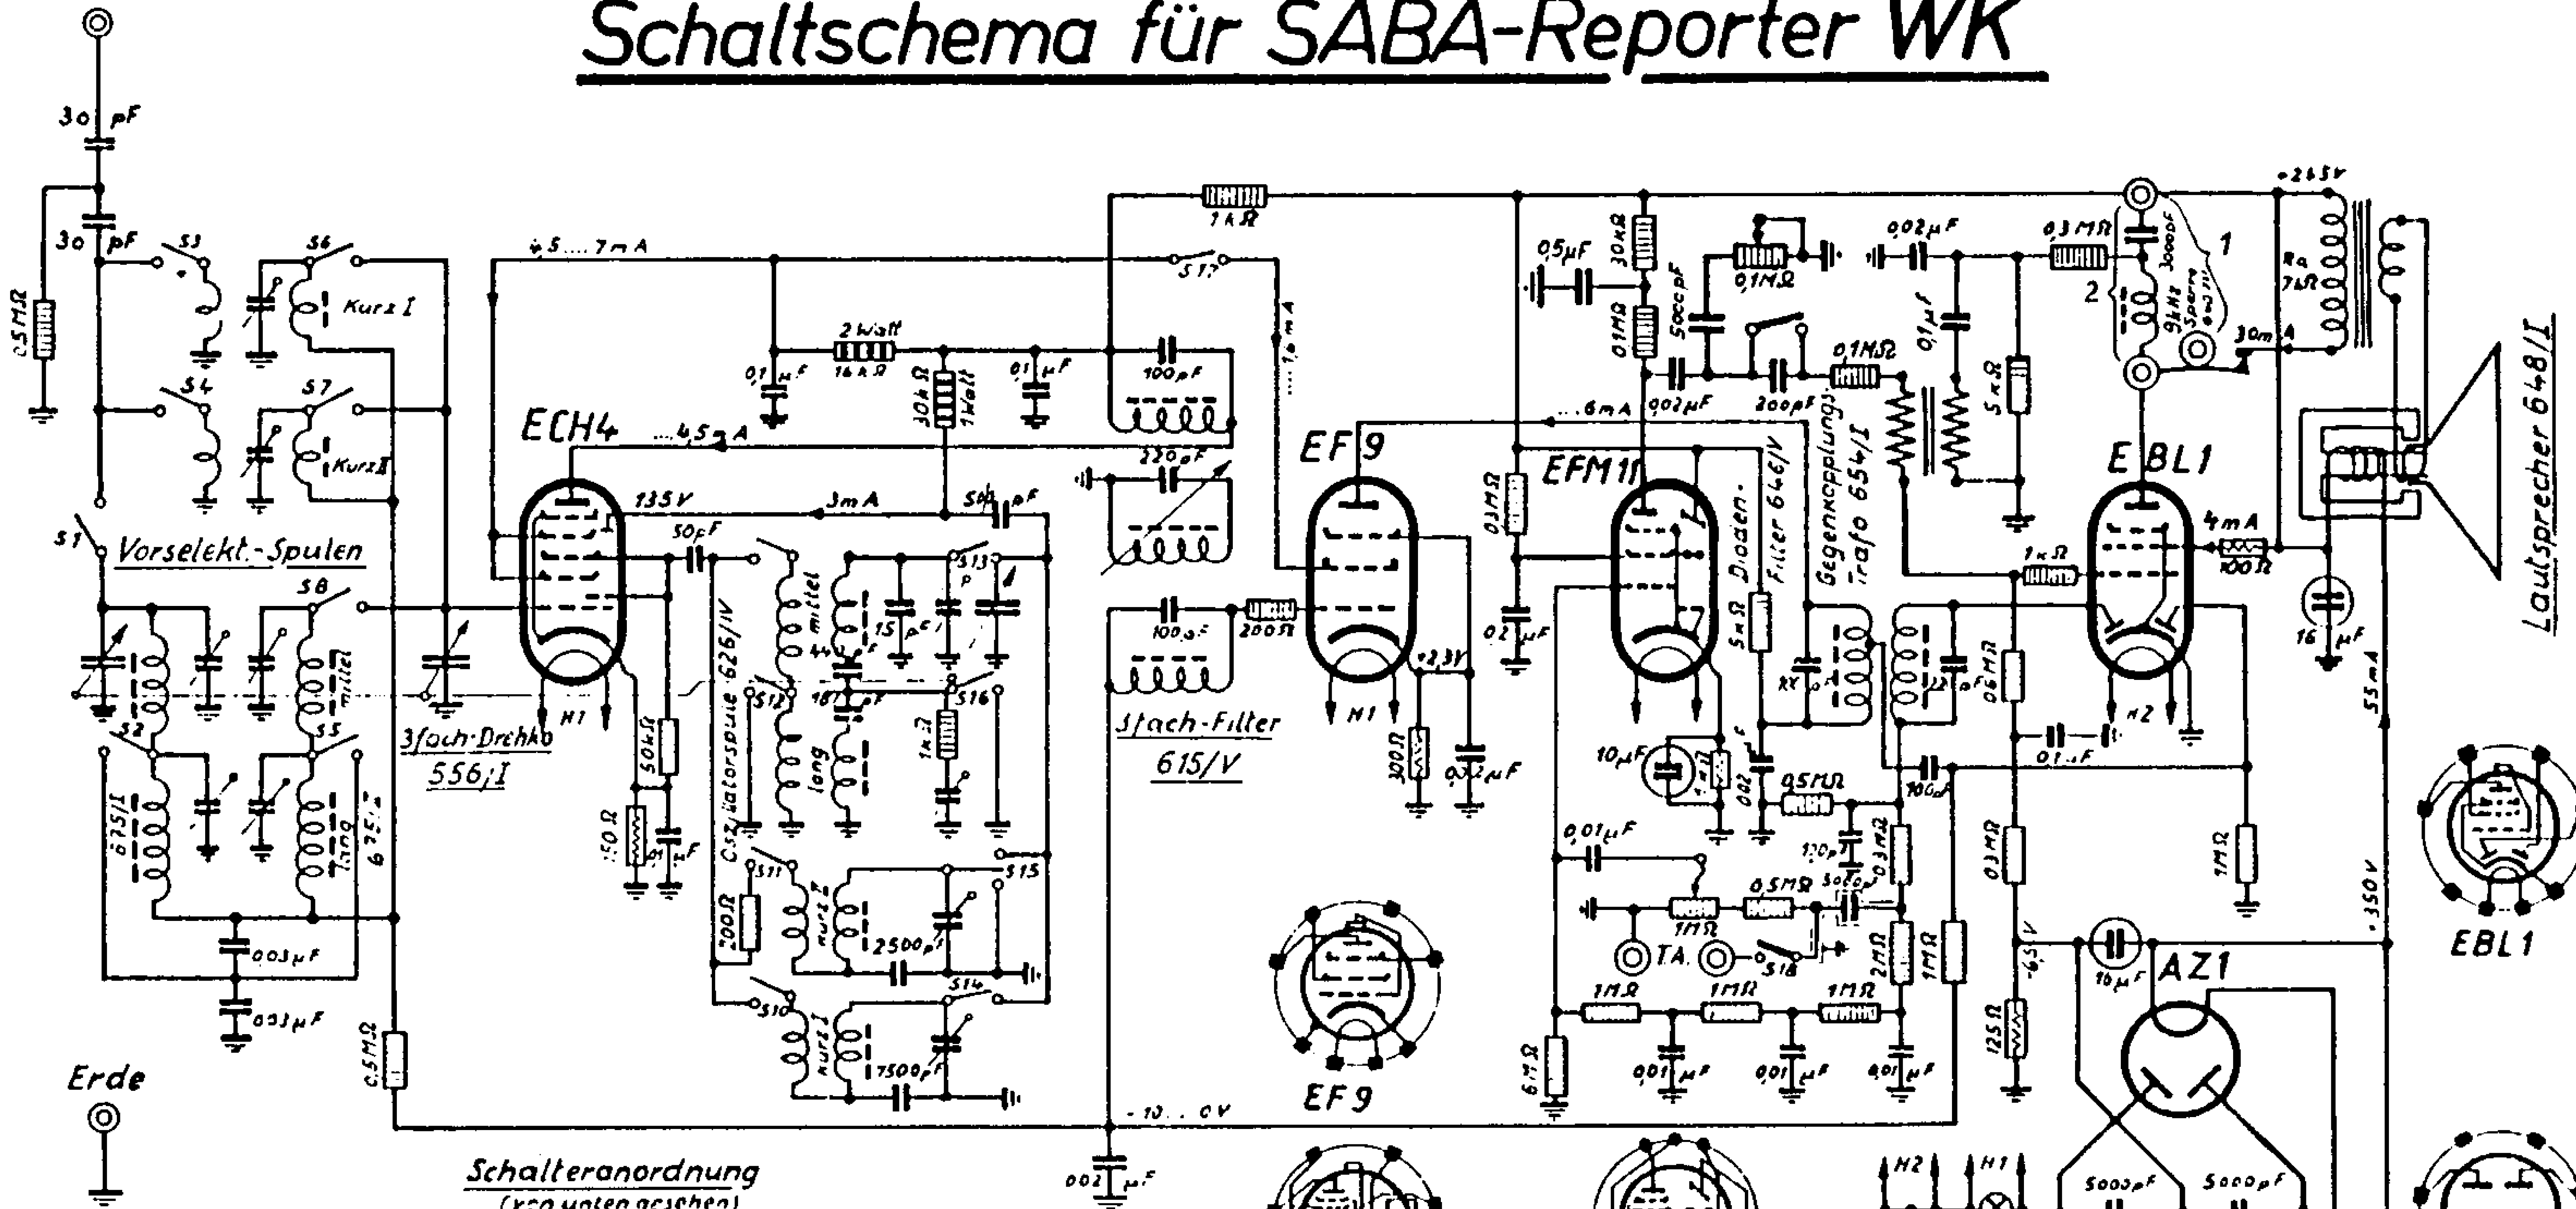

Erde

Schalteranordnung
(von unten gesehen)

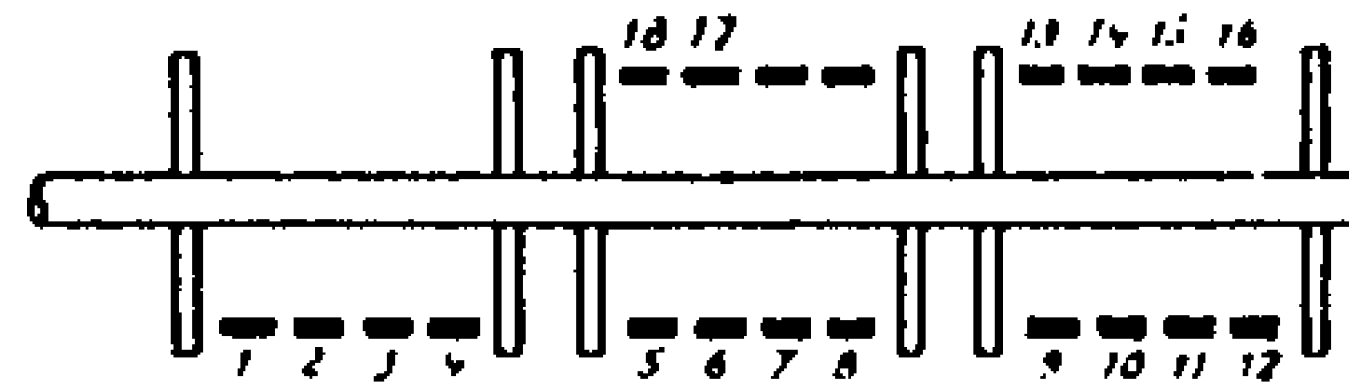


☐ Schalter offen
☒ Schalter geschlossen

Schalter	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Kurz I	☐	☐	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒
Kurz E	☐	☐	☐	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒
Mittel	☒	☒	☐	☐	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒
Lang	☒	☐	☐	☐	☐	☐	☐	☐	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒
T A	☐	☐	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒

650/LXXXIc

Leistungsaufnahme 62 Watt

Alle Gleichspannungen sind gegen die Montageplatte zu messen! (Multavi II)
600 V } ~ - Bereich
30 V }

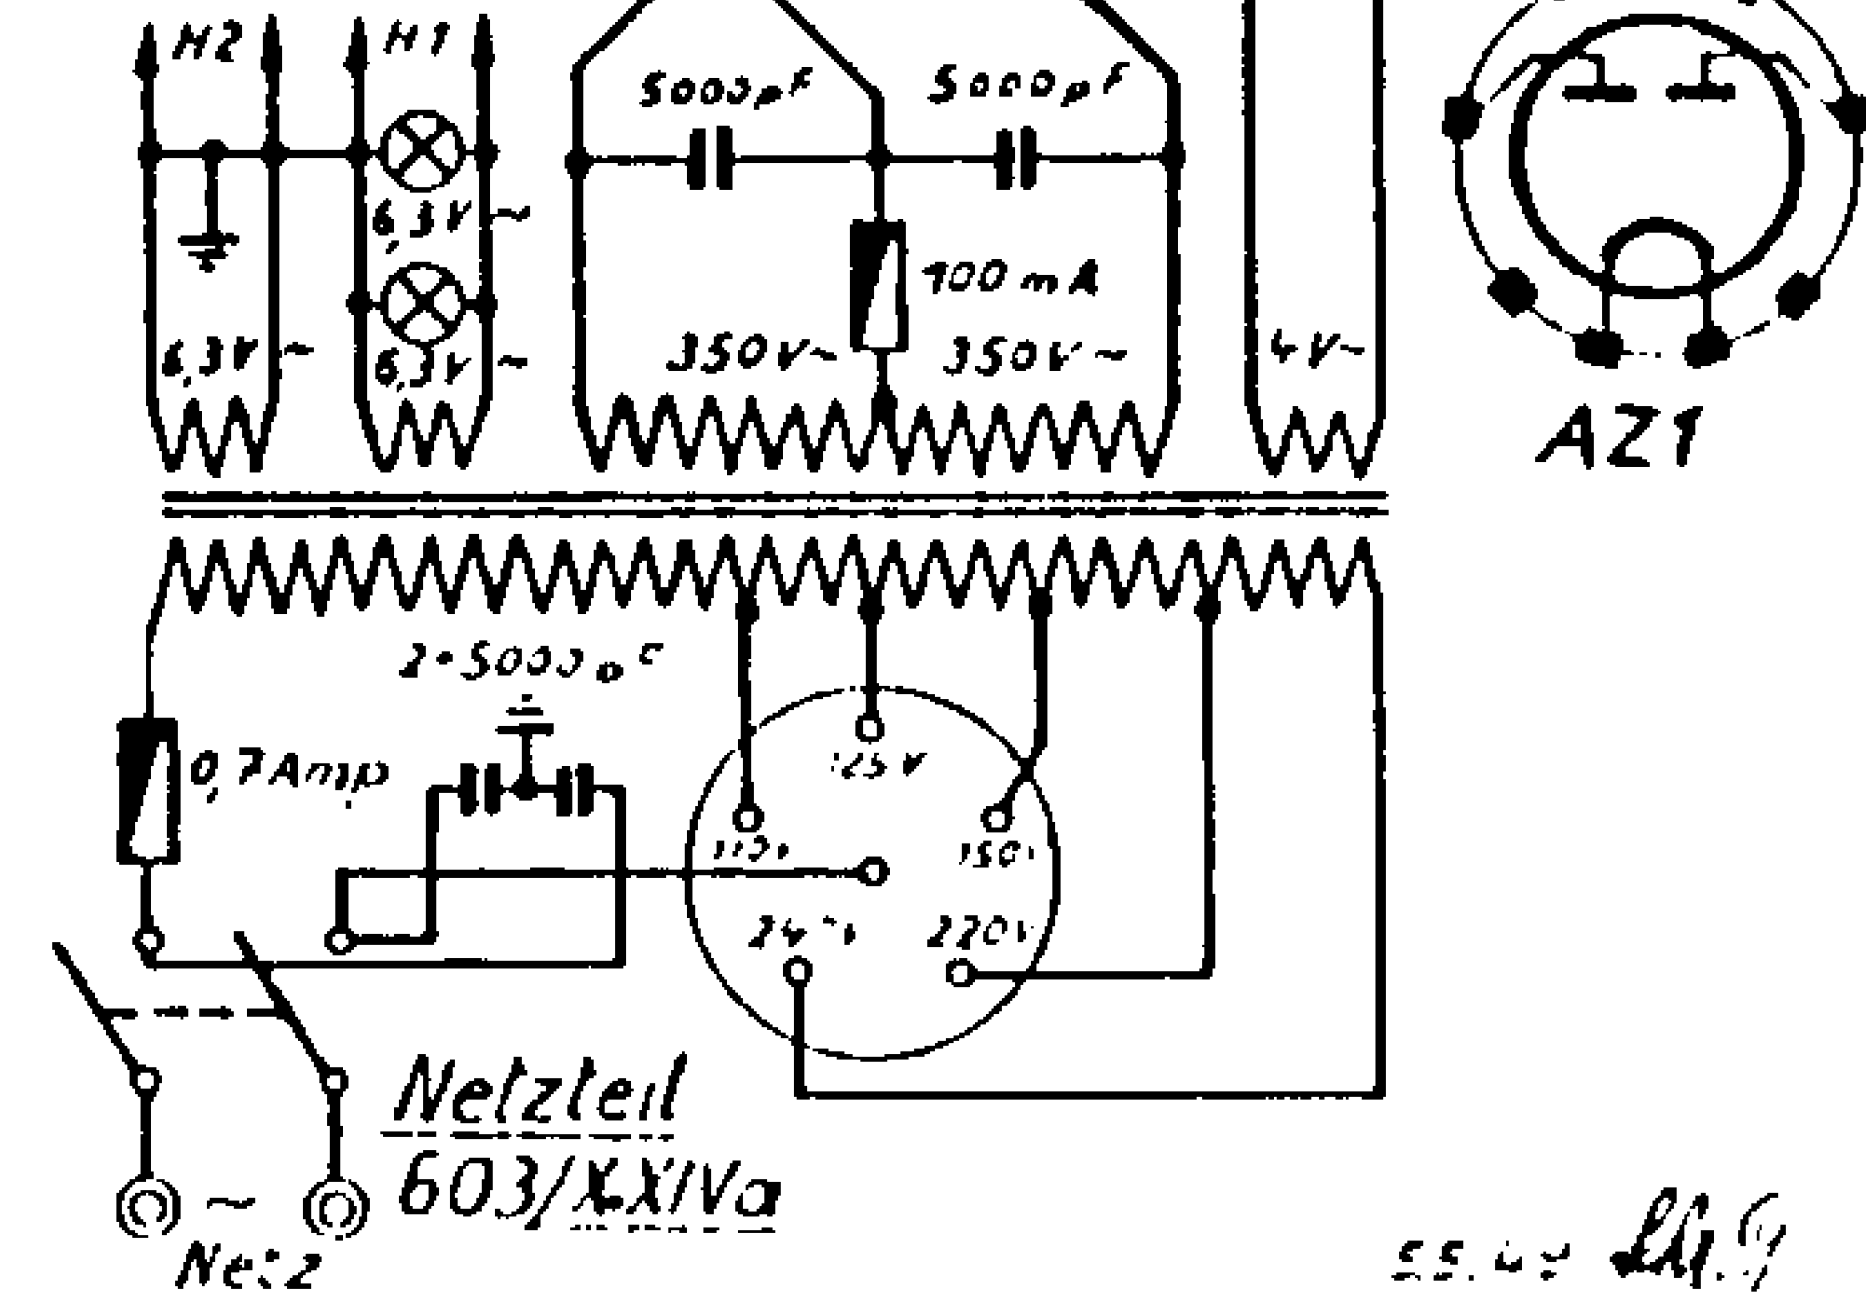

SS. 42 LK. 9